

## 5. Wi-Fi Setup

Download and install the Hi-Fly app by scanning below QR code, or search "Hi-Fly" in the App Store (iOS devices) / Google Play (Android devices).

Open the App and follow the on-screen guide to set up your Wi-Fi audio network.

**Note:** If you use the Ethernet connection, no network setup is required. Just open the app and the device is ready for use!

\*Analog input signal can be shared with other Wi-Fi audio devices in Multi-Room mode.

\*For additional information, see the Hi-Fly Audio App Guide and Product Manuals online at [daytonaudio.com](http://daytonaudio.com).

Scan to download for iOS



Scan to download for Android



**5-Year Limited Warranty**  
See [daytonaudio.com](http://daytonaudio.com) for details



[daytonaudio.com](http://daytonaudio.com)  
tel + 937.743.8248  
[info@daytonaudio.com](mailto:info@daytonaudio.com)

705 Pleasant Valley Dr.  
Springboro, OH 45066  
USA



 
# WI-FI BLUETOOTH MULTI-ROOM 2X20W AMPLIFIER WITH IR REMOTE

Model: WB40A  
Quick Start Guide




## 1. Contents


- Wi-Fi/Bluetooth Audio Amplifier
- Quick Start Guide
- 15V Power Adapter
- Screws/Driver
- 3.5mm Male to RCA Cable
- Mounting Pad
- 3.5mm to Male to Male Cable
- IR Remote

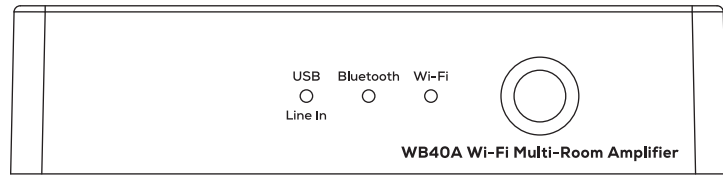


Wi-Fi Bluetooth Audio Amplifier

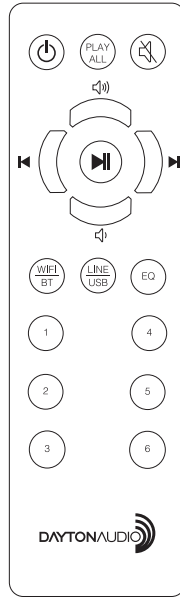 


IR Remote

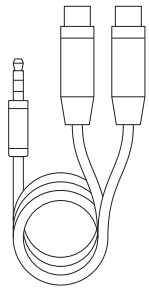 

 3.5 mm to Male to RCA Cable




 3.5 mm to Male to Male Cable

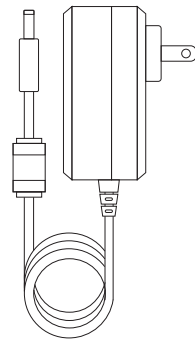


15V Power Adapter

## 2. Connections

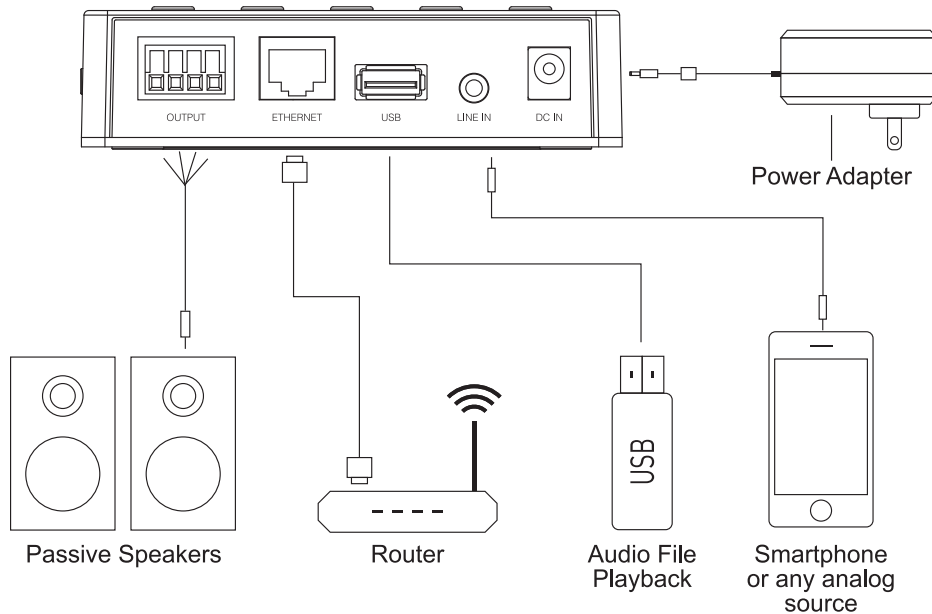 

(2)

## 3. Functions and Controls

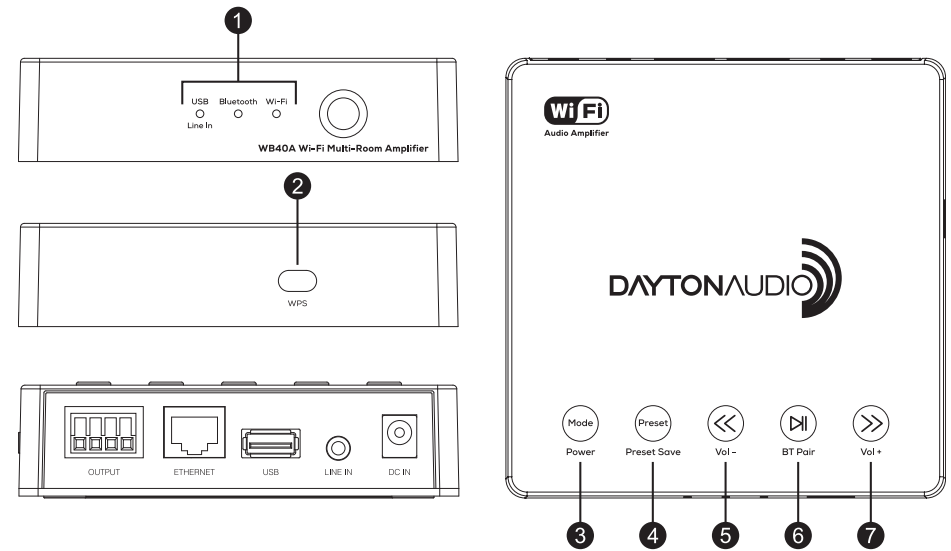 

1. Led input source Indicators USB/Line Input, Bluetooth and Wi-Fi

2. WPS Button for network connection and factory reset

### Button controls:

#### Quick press function

 
- 3. Mode – changes the input source
- 4. Preset – recall saved presets
- 5. Back
- 6. Play/Pause
- 7. Next

#### Long press (hold) function

- Power ON/OFF
- Preset save
- Vol –
- BT pairing
- Vol +

## 4. IR Remote

- 1. ON/OFF
- 2. Play All connects/disconnects all Wi-Fi audio devices in multi-room mode
- 3. Mute
- 4. Play/Pause
- 5. Volume Up
- 6. Volume Down
- 7. Next/Forward
- 8. Previous/Back
- 9. Audio Source select
- 10. EQ-Press to select (Flat, Rock, Pop or Vocal)
- 11. Preset recall 1-6

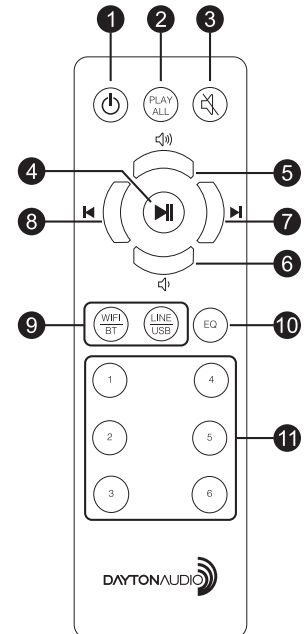

(3)